



CHARGING COMPUTER COMPONENTS
 • Always use the AC Adapter. Do not use the laptop's internal battery as a power source.
 • Use the AC Adapter with the Dell Laptop. Do not use the AC Adapter with other Dell or non-Dell laptops.
 • Do not use the AC Adapter with a power source that is not rated for use with 120VAC and 50 or 60 Hz AC power.
 • Do not use the AC Adapter with a power source that is not rated for use with 120VAC and 50 or 60 Hz AC power.

CAUTION: FIRE HAZARD

CONNECT TO THE WALL OUTLET ONLY
 TO PREVENT FIRE OR ELECTRIC SHOCK, DO NOT REMOVE COVER. ALL SERVICE WORK SHOULD BE PERFORMED BY A QUALIFIED SERVICE PERSONNEL.
 • AC INPUT: 100-240V - 2.8A @ 50/60 Hz
 • DC OUTPUT: 19V (1.5A) 28.5W (MAX) 90W

CE N136
 N 1130009






CT 96A550ALLPCJNS





65090876

07-2-08