



DC 11.1V 4400mAh/49Wh
Replacement BTY-511
1. 避免電池過度放電或過度充電。請勿將電池存放於高溫或低溫環境。
2. 禁止將電池投入火中或浸入水中。請勿將電池拆解或刺穿。
3. 當電池完全放電後，請勿繼續使用。包含時鐘、滑鼠等，請立即更換新電池。



CAUTION
Do not dispose of in the fire. Keep the battery away from fire. Do not attempt to repair, modify, or disassemble the battery pack. Do not attempt to charge the battery pack using any other method than the designated one to charge the battery pack.
Do not attempt to use the battery pack in any other way than the designated one to use the battery pack.
Do not attempt to use the battery pack in any other way than the designated one to use the battery pack.
Do not attempt to use the battery pack in any other way than the designated one to use the battery pack.

RECYCLING
This battery pack is made of plastic and metal. Do not dispose of in the fire. Please recycle this battery pack. Do not attempt to use the battery pack in any other way than the designated one to use the battery pack.